


# HAND BUILT

Bike	Kawaski ZX-4RR	Part No.	KA-1020
Year	2023-current	Fit Kit	Z039.10732
Notes	Where not supplied use original fittings.	dB Killer	SCEXDBK30 (Type PP)

Estimated Fitting Time: 30 Minutes

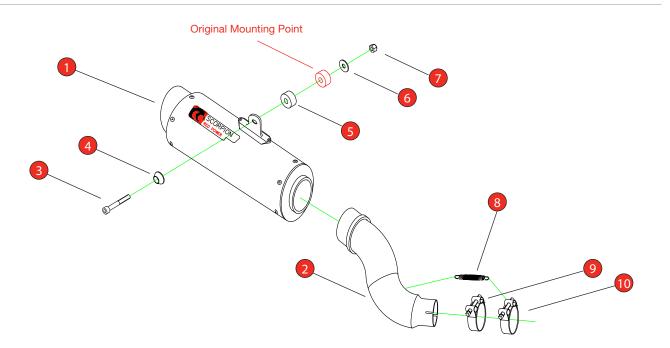

NO.	PART NO.	DESCRIPTION	QTY	CLASSIFICATION	Closed Circuit
1	SC524	RP1-GP Silencer	1		Product
2	CP1182	Connecting Pipe	1	HOMOLOGATED	No
Fit Ki	t - Z039.10732			DATE	24/11/2023
3	Z017.10081	M8 x 65mm Cap Head Bolt	1	ISSUE	00
4	Z026.20341B	Black Anodised Alloy Bolt Finisher	1	AUTHORISED	S Shipley
5	Z026.20341	20mm Black Anodised Alloy Spacer	1	-	
6	Z017.10831	M8 x 17mm Washer	1		
7	Z017.10062	M8 Nyloc Nut	1	-	
8	Z028.10030	Rubber Coated Spring	1		
9	Z016.10002	51-55mm Clamp	1	1	
10	Z028.20431	51-55mm Clamp with Spring Hoop	1		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



STAY CONNECTED TO RED POWER.



HAND BUILT
IN ENGLAND

Bike	Kawaski ZX-4RR	Part No.	KA-1020
Year	2023-current	Fit Kits	Z039.10732
Notes	Where not supplied use original fittings.	dB Killer	SCEXDBK30 (Type PP)











STAY CONNECTED TO RED POWER.







NOTE: Instructions show installation of Serket silencer, the RP1-GP silencer fits the same way.

A) Loosen the clamp for the rear silencer.

B) Loosen the rear silencer mounting bolt/nut.

C) Remove the nut and washer from the back of the mount, then support the weight of the silencer and remove the mounting bolt.

D) Carefully remove the rear silencer from the bike.

 E) If the gasket stays on the original connecting pipe, remove it as it's not required when fitting the Scorpion slip-on.

F) Remove the 2 highlighted bolts from the exhaust shield then remove the shield.

G) Unscrew the supplied clamp that has the spring hoop attached to it, then slide it over the original exhaust pipe.

H) Align the clamp approximately95mm from the end of the pipethen tighten up but leave a littleloose to allow for adjustment later.





HAND BUILT	
IN ENGLAND	)


Bike	Kawaski ZX-4RR	Part No.	KA-1020
Year	2023-current	Fit Kits	Z039.10732
Notes	Where not supplied use original fittings.	dB Killer	SCEXDBK30 (Type PP)









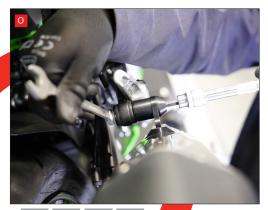

STAY CONNECTED TO RED POWER.



I) Place the plain clamp over the Scorpion connecting pipe then slide the pipe onto the original exhaust.

J) Slide the Scorpion silencer onto the connecting pipe.

K) Place the supplied spacer between the silencer mounting bracket and the original mounting point on the bike.

L) Put the bolt through the bolt finisher, then through the mount/ spacer then secure in place with the washer and nut.

M) Rotate the clamp with spring hoop so that it's in line with the spring hoop on the connecting pipe and tighten the clamp. Attach the spring between the hoops.

N) Fully tighten the connecting pipe clamp.

O) Fully tighten the silencer mounting hardware.

P) Re-install the exhaust shield.

Take the bike for a short ride to ensure all functions are correct. When the bike & exhaust are cool enough check all nuts and bolts are still secure.





# HAND BUILT

Bike	Kawaski ZX-4RR	Part No.	KA-1020
Year	2023-current	Fit Kit	Z039.10732
Notes	Where not supplied use original fittings.	dB Killer	SCEXDBK30 (Type PP)

#### Estimated Fitting Time: 30 Minutes



Thank you for purchasing your Scorpion Silencer. Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion. Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.



