



national cycle

INSTALLATION INSTRUCTIONS Cruiseline Chrome Saddlebag Kit SBC013 for HONDA® VT750 Aero

Parts List


Index	Description	Qty.
1	34-341124-000 Frame Bracket, Left	1
2	34-341125-000 Frame Bracket, Right	1
Bag 615		
3	51-515976-000 CS M10-1.25 x 75	4
4	49-495733-000 Bushing, .65 Length	2

Tools Needed

Hex Key Wrench 8mm


INSTALLATION

1. Loosen all six fender rail screws (8mm wrench).
2. Remove the front and middle screws from one side.
3. Position the frame bracket, start front screw, M10-1.25 x 75 (8mm wrench).
4. Position bushing into pocket at rear hole. Boss end of bushing goes toward fender strut. Start the M10-1.25 x 75 screw through mount bracket and bushing then into fender. (8mm wrench).
5. Repeat on other side.
6. Tighten all six screws to 29 ft.-lbs.

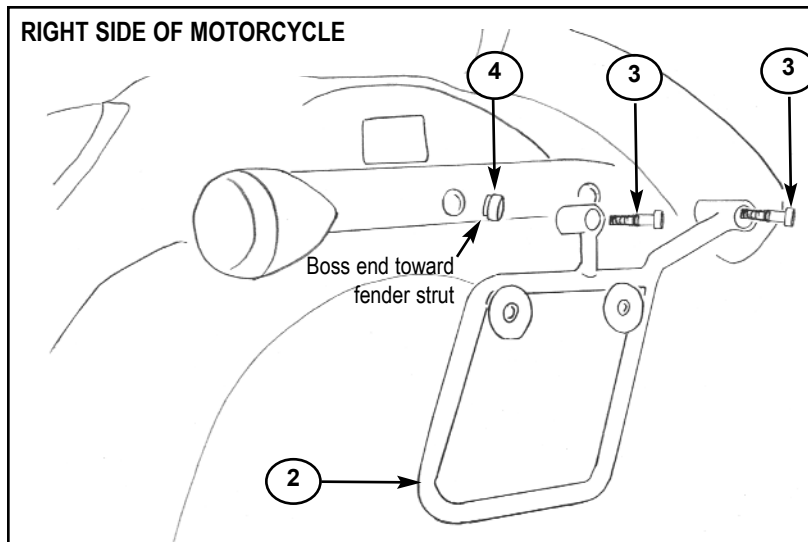

INSTALLATION OF SADDLE BAG TO FRAME


Rest the stainless steel clips attached to the outside of the bag to the lower section of the frame. Engage the quarter turn fastener to the frame. Push in and turn clockwise one quarter turn. There will be a slight spring pressure against the fastener, turn until it stops. Grab the side of the bag, wiggle it. The bag should be firmly set. If fastener is loose, repeat installation of bag to frame.

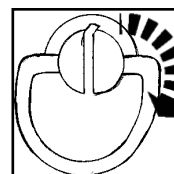

Turn Fastener clockwise one quarter turn.

Saddlebag Care: Wash with a mild soap or detergent and warm water. Use a soft cloth. To remove tar use naphtha or turpentine.

Painting: Lightly sand the surface with 600 grit sandpaper and spray lacquer, urethane or other paint.



Rest clip on lower section of frame

Replacement Parts: Contact National Cycle, Inc

! WARNING

Not to exceed 11 lbs (5kg) weight per bag. Do not exceed 80 mph (129 kph) when saddlebags are mounted.

On some motorcycles, additional accessories can reduce a motorcycle's stability and safe operating speed. Never ride a motorcycle that exhibits any unsafe handling characteristics. Remove all accessories and cargo at once. Have your dealer diagnose and solve the problem before remounting your accessories.