

Parts List


<u>Index</u>	<u>Description</u>	<u>Qty.</u>
1	34-341008-000 Frame Bracket, Left	1
2	34-341009-000 Frame Bracket, Right	1
Bag 1207		
3	51-515758-000 CS M8-1.25 x 55	4
4	49-495561-000 Spacer, .575 Length	4

Tools Needed

- Hex Key Wrench 6mm
- Wrench 12mm

INSTALLATION

1. Loosen all four fender rail screws (12mm wrench).
2. Remove the front and rear screws from one side.
3. Start at front location and position a spacer between frame bracket and fender strut, start front screw, M8-1.25 x 55 (6mm hex key).
4. At rear location position a spacer between frame bracket and fender strut, start the M8-1.25 x 55 screw through mount bracket and spacer then into fender. (6mm hex key).
5. Repeat on other side.
6. Tighten all four screws to 22 ft-lbs

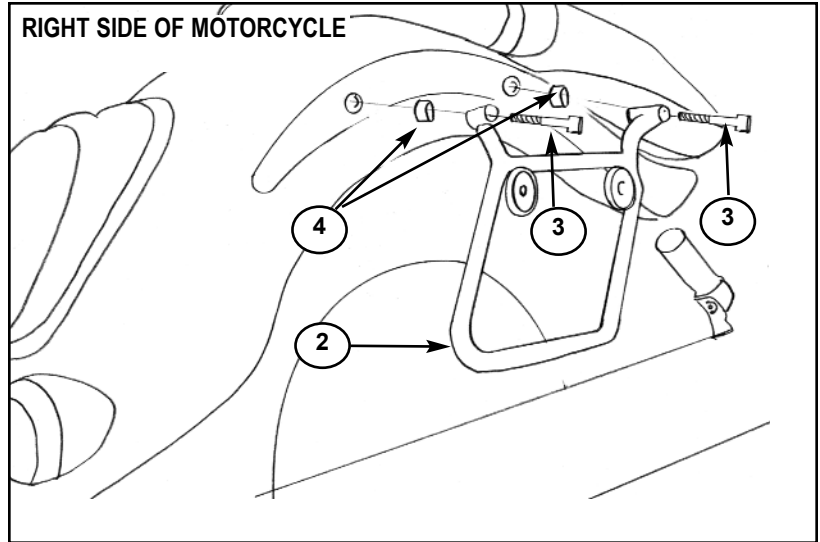


INSTALLATION OF SADDLE BAG TO FRAME

Rest the stainless steel clips attached to the outside of the bag to the lower section of the frame. Engage the quarter turn fastener to the frame. Push in and turn clockwise one quarter turn. There will be a slight spring pressure against the fastener, turn until it stops.




Grab the side of the bag, wiggle it. The bag should be firmly set. If fastener is loose, repeat installation of bag to frame. Do not ride your motorcycle with loose mount hardware.

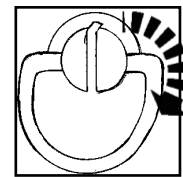

Turn Fastener clockwise one quarter turn.

Saddlebag Care: Wash with a mild soap or detergent and warm water. Use a soft cloth. To remove tar use naphtha or turpentine.

Painting: Lightly sand the surface with 600 grit sandpaper and spray lacquer, urethane or other paint.



Rest clip on lower section of frame

Replacement Parts: Contact National Cycle, Inc.

! WARNING

Not to exceed 11 lbs (5kg) weight per bag. Do not exceed 80 mph (129 kph) when saddlebags are mounted.

On some motorcycles, additional accessories can reduce a motorcycle's stability and safe operating speed. Never ride a motorcycle that exhibits any unsafe handling characteristics. Remove all accessories and cargo at once. Have your dealer diagnose and solve the problem before remounting your accessories.