



## Mounting Suggestions: Honda Gold Wing F6B 2013 One-Piece Seat

**Hardware included:** 2 6mm x 16mm button-head Allen bolts

**Tools needed:** 6mm Allen wrench  
8mm hex wrench or socket



### Baseplate Features

The one-piece, marine-grade fiberglass baseplate directly replaces the stock one-piece seat. Rubber bumpers are positioned to prevent the seat from touching the frame and fender.

### Removal of Stock Seat:

1. Using a 6mm Allen wrench, remove the two Allen bolts from the left passenger grab rail. These bolts will be used to install your Mustang seat. (fig. 1)

**Note - the rail is quite heavy; use caution to prevent it from dropping onto the motorcycle or yourself.**


2. Repeat procedure to remove the right grab rail.
3. Locate and remove the two 6mm hex bolts which were covered by the hand rail with an 8mm hex wrench or socket. These will **\*not\*** be used to install your Mustang seat. (fig. 2)
4. Lift the rear of the stock seat, pull up and back to remove seat from frame.

### Installation of Mustang Seat:

1. Install the provided 6mm x 16mm Allen bolts through the fender and into the frame. Be sure these bolts are tightened.
2. Place the Mustang seat on frame and slide forward to engage the nose bracket with the frame receiver.
3. Insert one long stock Allen bolt through the left grab rail's forward mounting hole, through the Mustang seat's forward mount, and thread it into the frame. Keep this bolt somewhat loose. (fig. 3)

**Note - if the bolt is difficult to thread, adjust the alignment of the Mustang seat's mounting inserts with the frame hole using a blunt tool such as a Phillips screwdriver.**


4. Align the rear grab rail holes with the rear mounts in the side of the Mustang seat. Be sure the saddlebag release stem is in the grab rail's release mechanism, and thread one short stock Allen bolt through as before.

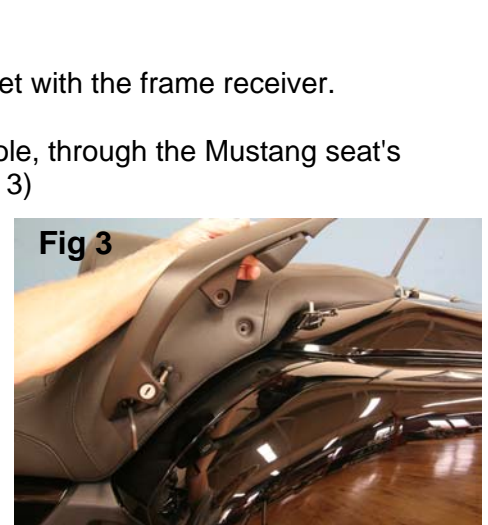



5. Repeat procedure with the right grab rail.

6. Slowly tighten the four Allen bolts evenly, working back and forth from the left to the right side, until all bolts are tightened. (fig. 4)

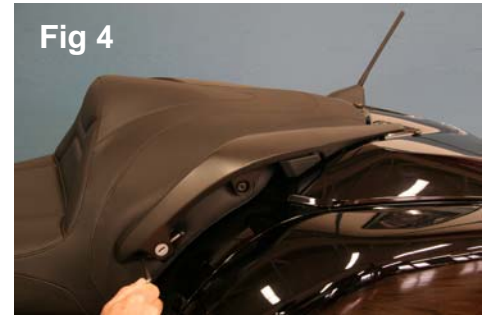

**Enjoy the comfort and custom look of your new Mustang seat!**



These steps are guidelines to help you install your new Mustang product. If you need further assistance, please call us at 800-243-1392 or 413-668-1190, Monday through Friday 9:00 - 5:30 Eastern or send an e-mail to [questions@mustangseats.com](mailto:questions@mustangseats.com) or visit our website at [www.mustangseats.com](http://www.mustangseats.com).

For care and maintenance of our seats, please go to our website under "Support".

Refers to part numbers: 76840, 76841