


CB1300 Bellypan

Fitting instructions

This kit contains: 1x CB1300 Bellypan
4x P-Clips
4x M6x25 Button head bolts
4x M6 plastic washers
4x Lug Nuts

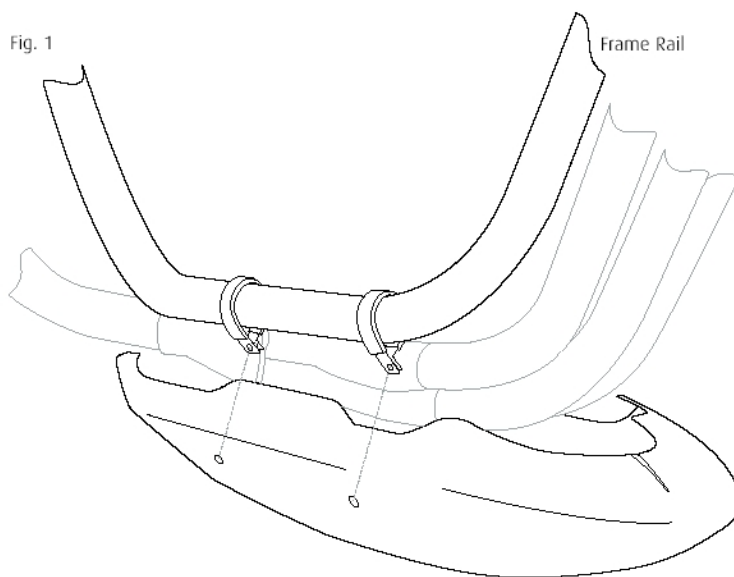

1. Fit 1 lug nut to each p-clip.the nut should placed on the folded tab.
2. Fit 2 p-clips on each frame rail as per fig.1.
3. Offer the bellypan up to the bottom of the bike as pictured, the p-clips can be moved along the frame rail to meet the pre drilled holes.
4. Using the bolts provided, fasten the bellypan loosely to the p-clips.NB it may be easier to begin with the front right (if sat on the bike).
5. The bellypan can then be positioned so there is approximately 12mm gap between the front exhaust pipe and the trimmed edge of the belly pan.
6. Tighten all mounting bolts